

Cable Ceiling Instructions



Using the Allen Key provided loosen the attachment.



Insert the screw and/or wall plug that attaches to ceiling and attach this section to ceiling.



Screw cap back on to attachment



Tighten with Allen Key provided.