
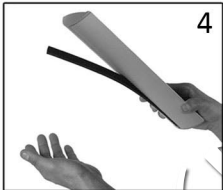
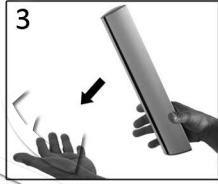
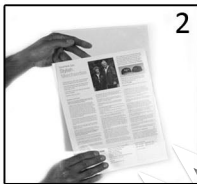


# Instructions

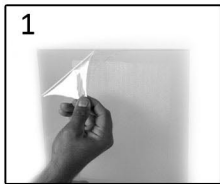

1. Remove protective film wrap.
2. Insert menu in between acrylic sheets.
3. Turn base upside down.
4. Tap against hand to expose rubber.
5. Insert plastic cover in rubber channel.
6. Insert from the side and push down.