



STAND OFF FRAME INSTRUCTIONS

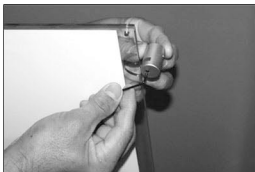

Place poster into frame. Insert top half of attachment onto frame. Tighten attachment as shown. Measure distance between attachments from center to center.

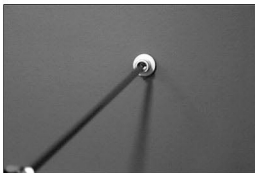

Mark and drill holes on wall. Use measurements from the step before. Place bottom half of attachment and tighten screw as shown.



Place frame on to attachment. Make sure all 4 sides are placed correctly. Please provide support to frames while they are on the wall to prevent them from falling.



Fasten attachment as shown. To replace image, pull top of the frame and insert new artwork.